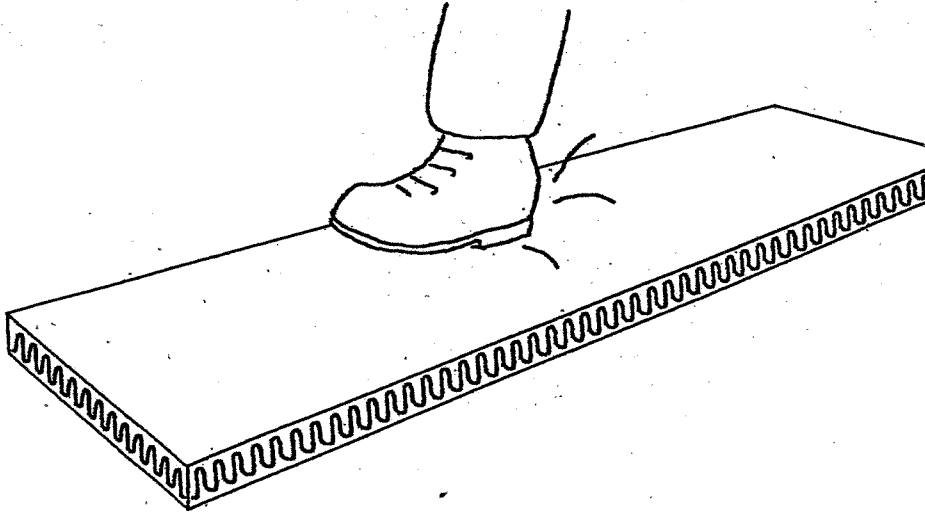

IMPORTANT

Avoid to walk on the panel.



If you need to walk on the panels, the panels should be protected by using a 15 mm thick plywood board.

